

## Fascia Post Installation Instructions


Step 1: Determine post position based on railing lengths.

Step 2: After determining post position install fascia bracket onto fascia board 3" down from top of deck using 4 - 5/16" x 4" lag screws.

Note: edge of deck must have minimum 3/4" to a maximum of 2" nosing installed (see below)

Step 3: Slide post into fascia bracket and secure with 6 - # 12 x 1" tek screws. (sold separately)

Note: same procedures are to be used for DekSmart picket, glass and topless glass systems

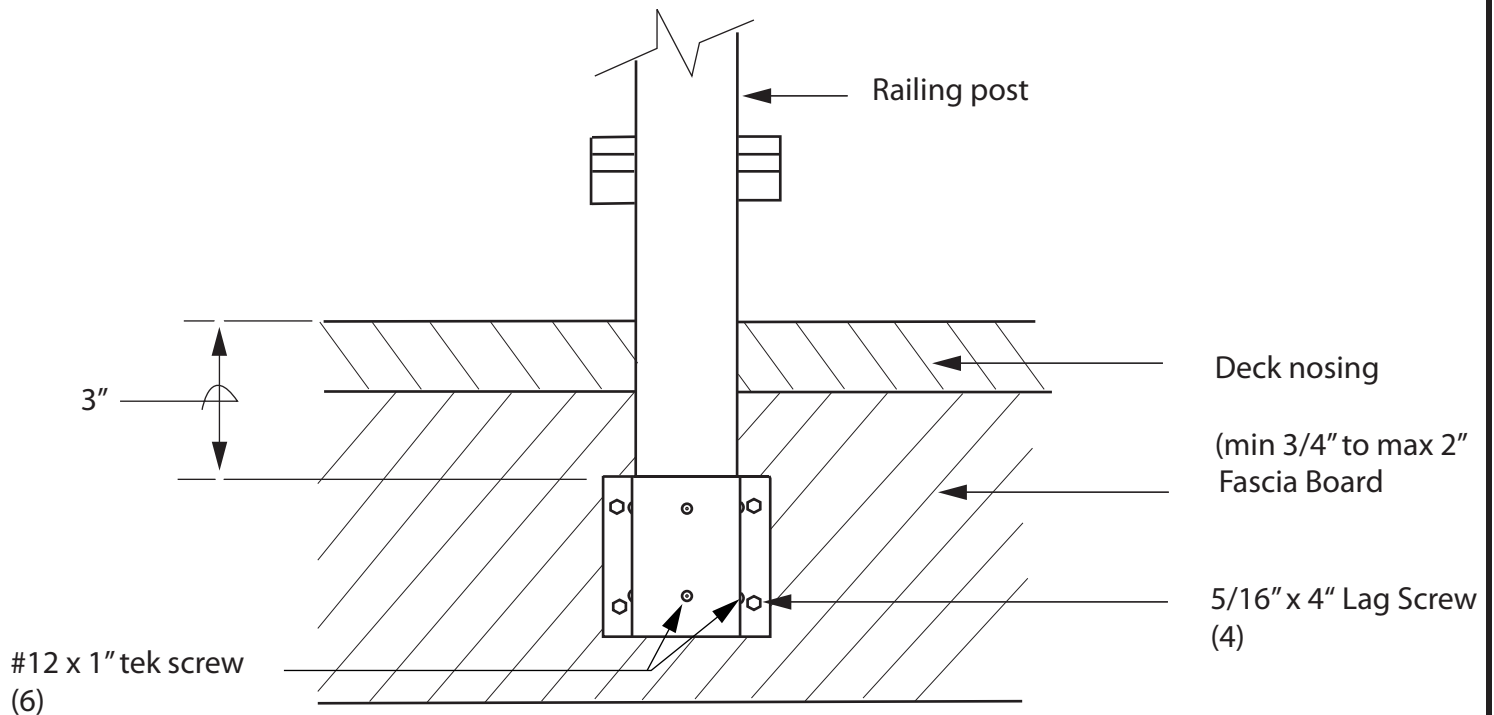

### Connection Detail

